




## Sport 60mm Side Bars - Stainless Steel or Black

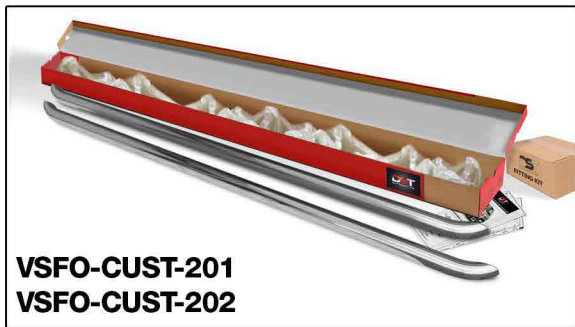

Fitting instructions for the:

## **Ford Transit Custom 2013-17 & 2018-on** Short Wheel base & Long Wheel Base


Estimated Fitting Time:



50 Min.



Make sure the M10 Clips are the right way up



**Check contents of the fitting kit before starting**



Socket Size Req.  
M6 = 10 Nm  
M8 = 25 Nm  
M10 = 50 Nm




**RIGHT**

**FRONT**


**LEFT**

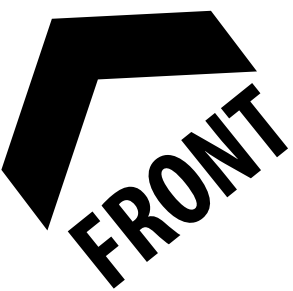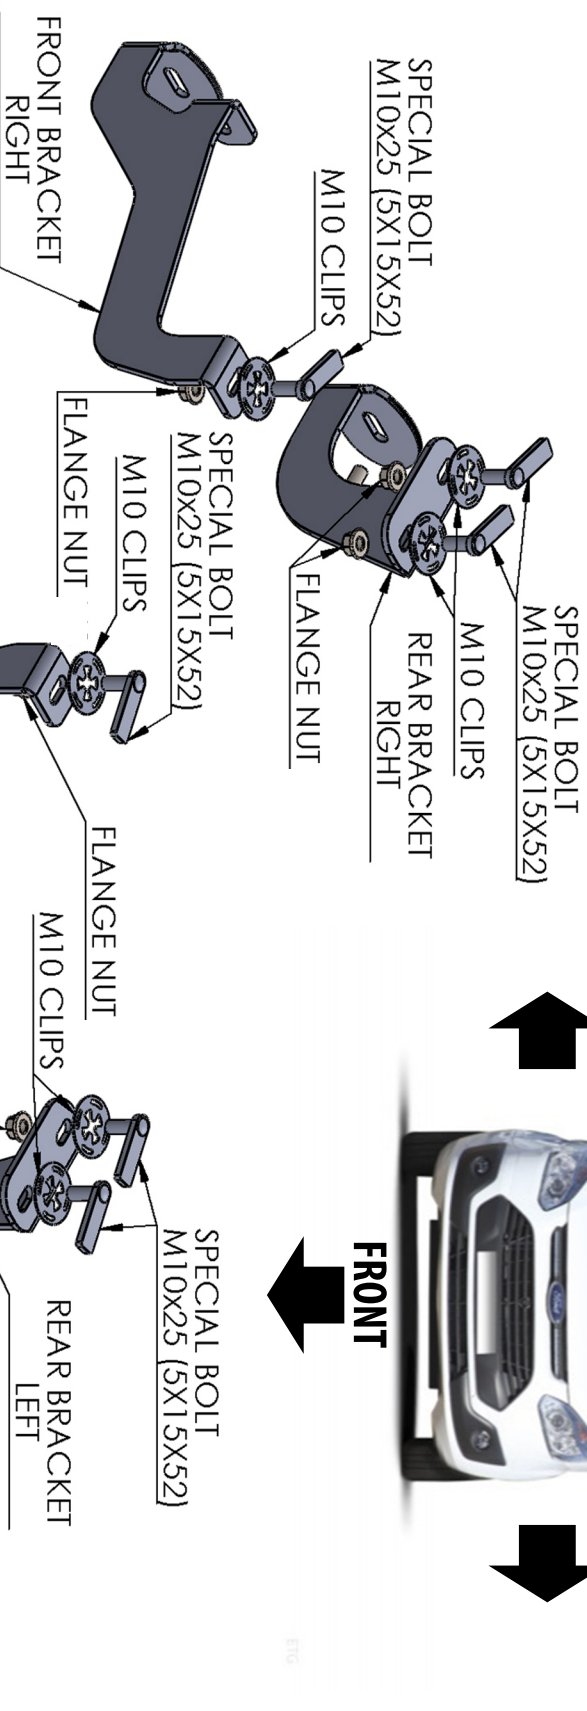

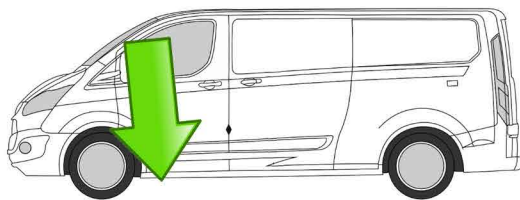

**Front brackets fixing stages**



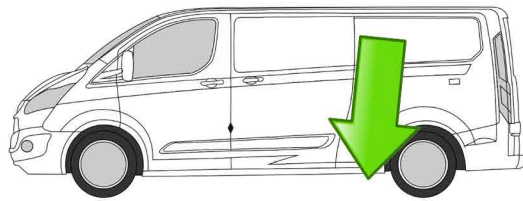

**Rear brackets fixing stages**



# Bracket fixing Overview

